


3-3. Using the interior lights

Interior lights list

Your Lexus is equipped with the illuminated entry system to assist in entering the vehicle. Owing to the function of the system, the lights shown in the following illustration automatically turn on/off according to the presence of the electronic key, whether the doors are locked/unlocked, whether the doors are opened/closed, and the “ENGINE START STOP” switch mode.

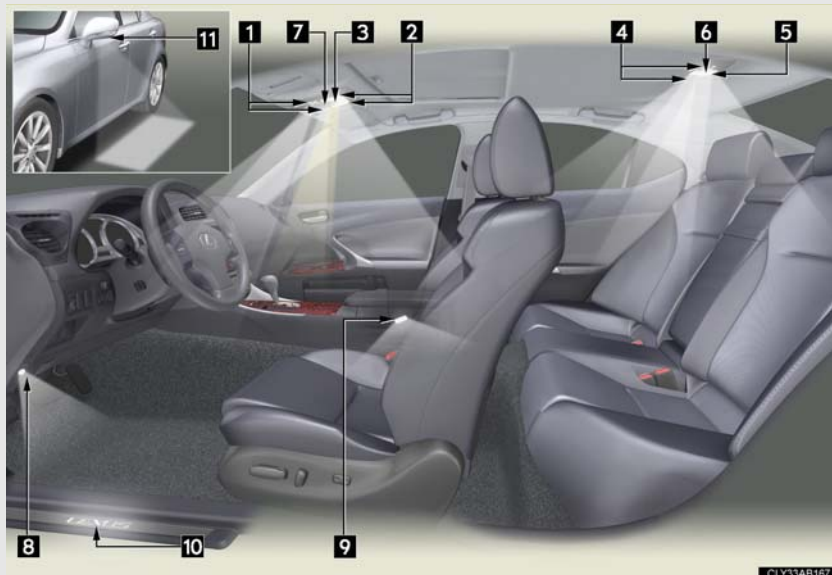

- 1 Front personal lights (→P. 249)
- 2 Front interior light (→P. 249)
- 3 Front overhead courtesy light
- 4 Rear personal lights (→P. 249)
- 5 Rear interior light
- 6 Rear overhead courtesy light
- 7 Shift lever light (when “ENGINE START STOP” switch is in ACCESSORY or IGNITION ON mode)
- 8 Front foot well lighting

- 9 Front door courtesy light
- 10 Front scuff lighting (if equipped)
- 11 Outer foot lights

Turning the instrument panel light control knob fully to the left disables the shift lever lighting and front foot well lighting.

n **To prevent the battery from being discharged**

If the overhead courtesy lights and interior lights remain on when the door is not fully closed and the interior light switch (door position on/off) is on, the lights will go off automatically after 20 minutes.

n **Customization that can be configured at Lexus dealer**

Setting (e.g. The time elapsed before lights turn off) can be changed. (Customizable features →P. 461)

Interior lights

► Models without a moon roof



- 1 Door position on/off
- 2 On/off

► Models with a moon roof



- 1 Door position on/off
- 2 On/off

Personal lights

► Front (models without a moon roof)



On/off

► Front (models with a moon roof)



On/off

► Rear



On/off